

PARAGLĪDER

Version 1.0

Date: 23.05.2011

Manual (EN)





IMPORTANT

Swing Flugsportgeräte GmbH reserves the right to alter or add to the contents of this Manual at any time. You should therefore regularly visit our website:

www.swing.de

where you will find additional information relating to your paraglider and any changes to the Manual. There is further information about the Swing website in the section "Swing on the World Wide Web".

The date and version number of the Manual are given on the first page.

Express written consent from Swing Flugsportgeräte GmbH is required for any duplication of this Manual, in whole or in part (with the exception of short quotations in specialist articles), and in any form or by any means, whether it be electronic or mechanical.

No claim arises to the product descriptions, common or trade names or other intellectual property by virtue of the fact that this Manual has been made available.



DEAR SUING CUSTOMER

THANK YOU FOR PURCHASING A SWING PRODUCT!

We hope that flying a Swing glider will bring you many years of enjoyment. The innovative design, first-rate materials and high quality workmanship of your paraglider set it apart from others. Your Swing paraglider was developed to comply with all of the current safety and certification requirements in Germany.

To enhance your flying enjoyment further, we recommend that you familiarise yourself with the information and instructions contained in this Manual regarding safety, equipment and service.

If you have any questions which are not answered in this Manual, please do not hesitate to contact Swing directly or your Swing dealer. Our contact details are in the Appendix.

The Swing Team



Contents

01 INTRODUCTION	7
Manual Swing Flugsportgeräte and the environment	8 8
02 SAFETY	9
SAFETY ADVICE SAFETY NOTICES DISCLAIMER AND EXCLUSION OF LIABILITY GLIDER CATEGORIES AND GUIDELINES EN/LTF certification	9 10
03 TECHNICAL DESCRIPTION	12
GENERAL LAYOUT ILLUSTRATION	12 13 13
BEFORE THE FIRST FLIGHT	14 15 16 18 18 18
05 FLYING THE AXIS 5	20
LAYING OUT THE PARAGLIDER AND PRE-FLIGHT CHECK	20 21



Turns	21
Rapid descent methods	22
Spiral dives	22
B-stall	
Big Ears	
LANDING	
06 TYPES OF USE	25
WINCH LAUNCH	21
Attaching the towline release system	
MOTORISED FLIGHT	
TANDEM PARAGLIDING	
AEROBATICS	
07 DANGEROUS SITUATIONS AND EXTREME FLYING	27
Dangerous situations	27
COLLAPSING THE PARAGLIDER	
Asymmetric collapse	
Front stall	
TYPES OF STALL	
Deep stall	
Full stall	
Spin	
Emergency steering	
Other tips for dangerous situations	
Stalling in rain	
Advertising and adhesives	
Overloading	
Sand and salt air	
Temperature range	
-	
08 STORING AND LOOKING AFTER THE PARAGLIDER	
STORING THE PARAGLIDER	
Packing the paraglider	
Storing and transporting the glider	
Looking after the paraglider	
Fabric	33
Lines	34
Cleanina	34



09 REPAIRS, INSPECTIONS AND WARRANTY	35
Type designation	35
Repairs	
Swing workshops	35
Small repairs to the glider	
REGULAR INSPECTIONS	35
Lines	35
Inspection	36
General	36
Inspection periods	36
Validity of inspection	36
Inspection by the pilot	
Warranty	37
10 SWING ON THE WORLD WIDE WEB	38
SWING WEBSITE	
PRODUCT REGISTRATION	
SWING-ONLINE SHOPFACEBOOK, TWITTER & YOUTUBE	
Paragliding	
Speedgliding	
Swing TV	
10 APPENDIX	39
Addresses	39
Swing Flugsportgeräte GmbH	
Paraglider recycling	
DHV	39
EAPR	39
DULV	39
Versions	39
Version 1.0	39
NOTES	40



01 Introduction

Manual

We recommend that you familiarise yourself with your new paraglider by reading this Manual before your first flight. This will allow you to acquaint yourself its new functions, to learn the best way to fly the paraglider in various situations, and explain how to get the best out of your paraglider.

Information in this Manual on design of the paraglider, technical data and illustrations are subject to change. We reserve the right to make changes without prior notification.

The Manual complies with the airworthiness requirements in LTF NFL II 91/09.

© Swing Flugsportgeräte GmbH

Special text



WARNING

Sections of text headed 'Warning' indicate that there is a risk of injury.



IMPORTANT

Sections of text headed 'Important' indicate that there is a risk of material damage.



TIP

Sections of text headed 'Tip' give advice or tips which will make it easier to use your paraglider.

Series of instructions

In this Manual, instructions which must be followed in a certain order are numbered consecutively.

- Where there is a series of pictures with step-by-step instructions, each step has the same number as the corresponding picture.
- d Letters are used where there is a series of pictures in which a particular order need not be followed.

Lists of parts

 Numbers circled in red refer to various parts of the item pictured. A list of the numbers and the part they are used to label follows the picture.

Bullet points

Bullet points are used in the Manual for lists. Example:

- risers
- lines

Paraglider Manual on the Internet

Additional information about your paraglider and any updates to the Manual can be found on our website at www.swing.de.

This Manual was current at the time of going to print. This Manual can be downloaded from Swing's website prior to print.



Swing Flugsportgeräte and the environment

Protection of the environment, safety and quality are the three basic values of Swing Flugsportgeräte GmbH and these have implications on everything we do. We also believe that our customers share our environmental awareness.

Respect for nature and the environment

You can easily play a part in protection of the environment by practising our sport in such a way that there is no damage to nature and the areas in which we fly. Keep to marked trails, take your rubbish away with you, refrain from making unnecessary noise and respect the sensitive biological equilibrium of nature. Consideration for nature is required even at the launch site!

Paragliding is, of course, an outdoor sport – protect and preserve our planet's resources.

Environmentally-friendly recycling

Swing gives consideration to the entire life cycle of its paragliders, the last stage of which is recycling in an environmentally-friendly manner. The synthetic materials used in a paraglider must be disposed of properly. If you are not able to arrange appropriate disposal, Swing will be happy to recycle the paraglider for you. Send the glider with a short note to this effect to the address given in the Appendix.



02 Safety



WARNING

The safety advice given below must be followed in all circumstances. Failure to do so shall render invalid the certification and/or result in loss of insurance cover, and could lead to serious injuries or even death.

Safety advice

All forms of aerial sport involve certain risks. When compared with other types of aerial sport, paragliding has the lowest number of fatal accidents measured according to the number of licensed pilots.

However, few other sports demand such a high level of individual responsibility as paragliding. Prudence and risk-awareness are basic requirements for the safe practice of the sport, for the very reason that it is so easy to learn and practically anyone can do so. Carelessness and overestimating one's own abilities can quickly lead to critical situations. A reliable assessment of conditions for flying is particularly important. Paragliders are not designed to be flown in turbulent weather. Most serious accidents with paragliders are caused by pilots misjudging the weather for flying.

Paragliders themselves are extremely safe. In the type certification tests, all component parts of a paraglider must withstand eight times the load of normal flight. There is a three-fold safety margin compared to the maximum extreme load occurring in flight. This is higher than the two-fold margin usual in aviation. Accidents caused by material failure are therefore practically unheard of in paragliding.

In Germany, paragliders are subject to the guidelines for air sports equipment and must

not under any circumstances be flown without a valid certification. Independent experimentation is strictly prohibited. This Manual does not replace the need to attend training at a paragliding school.

A specialist must test-fly and inspect the paraglider before your first flight. The test-flight must be recorded on the paraglider information label

Carry out your first flight with the paraglider on a training slope. For this flight and for all other flights, you must wear an approved helmet, gloves, firm shoes with anklesupport and suitable clothing. Only fly if the wind direction, wind speed and current and forecasted weather conditions guarantee a safe flight.

The Manual must be passed on to any new owner if the paraglider is sold. It is part of the certification and belongs with the paraglider.

The Axis 5 was developed and tested solely for use as a paraglider for foot-launch and winch-towing. Any use other than as intended is not permitted. Do not under any circumstances use the paraglider as a parachute. Acrobatics are not permitted.

Observe the other specific safety advice in the various sections of this Manual.

Safety notices

Safety notices are issued when defects arise during use of a paraglider which could



possibly also affect other gliders of the same model.

The notices contain instructions on how the affected gliders can be inspected for possible faults and the steps required to rectify them.

Swing publishes on its website any technical safety notices and airworthiness instructions which are issued in respect of Swing products. We will also send you safety notices directly by email if you have registered your product (refer to "Product Registration" in the section "Swing on the World Wide Web").



WARNING

The paraglider owner is responsible for carrying out the action required by the safety notice.

Safety notices are issued by the certification agencies and also published on the relevant websites. You should therefore visit on a regular basis the safety pages of the certification agencies and keep up-to-date with new safety notices which cover any products relating to paragliding (refer to Appendix for addresses).



Services such as RSS are also available which allow internet users to follow various websites and changes to them without having to access them

individually. This allows much more information to be followed than was previously the case.

Disclaimer and exclusion of liability

Use of the paraglider is at the pilot's own risk!

The manufacturer cannot be held liable for any personal injury or material damage

which arises in connection with Swing paragliders. The certification and warranty shall be rendered invalid if there are changes of any kind (incl. paraglider design or changes to the brake lines beyond the permissible tolerance levels) or incorrect repairs to the glider, or if any inspections are missed (annual and 2-yearly check).

Pilots are responsible for their own safety and must ensure that the airworthiness of the glider is checked prior to every flight. The pilot should launch only if the paraglider is airworthy. In addition, when flying outside of Germany, pilots must observe the relevant regulations in each country.

The glider may only be used if the pilot has a licence which is valid for the area or is flying under the supervision of an approved flying instructor. There shall be no liability on the part of third parties, in particular the manufacturer and the dealer.

In terms of the warranty and guarantee conditions, the paraglider may not be flown if any of the following situations exists:

- the inspection period has expired, or the inspection has been carried out by the pilot him/herself or by an unauthorised inspector
- the take-off weight is not within the permissible weight range
- the glider is flown in rain or drizzle, cloud, fog and / or snow
- there are turbulent weather conditions or wind speeds on launch higher than 2/3 of the maximum flyable airspeed of the glider (varies according to the total takeoff weight)
- the glider is used for aerobatics/extreme flying or flight manoeuvres at an angle greater than 130°
- the pilot has insufficient experience or training



- the pilot has incorrect or inadequate equipment (reserve, protection, helmet etc)
- the glider is used for winch-launching with a winch which has not been inspected or by non-licensed pilots and/or winch operators
- there have been modifications to the canopy, lines or risers which have not been approved

Glider categories and guidelines

The German Hanggliding and Paragliding Association (DHV) and its safety division have developed guidelines which are based on many years of analysing paraglider accidents and on the experience of flying schools, flying instructors and safety officers. These guidelines should help pilots to select the appropriate glider classification for their particular level of flying ability. The information below relates to the classification in EN/LTF-certification. There is also further information on the website of the relevant licensing body.

EN/LTF certification

The Axis 5 received A classification in the final classification by the licensing body.

Description of flight characteristics

This is a paraglider with a maximum of passive safety and extremely forgiving flight behaviour. Good resistance against abnormal flight attitudes.

Target group and recommended flying experience

Pilots who are learning to fly and pilots who fly infrequently or for whom pure flying pleasure is foremost, rather than maximum sporting performance.

Description of pilot skills required

Suitable for all pilots including pilots at all levels of training.

Suitability for training

The Axis 5 is suitable for use as a training glider.



03 Technical Description

General layout illustration

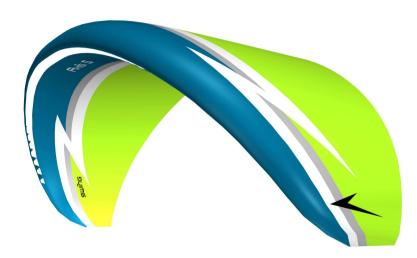


Fig. 1: CAD drawing of Axis 5

Axis 5 – Pure flying pleasure

The Axis 5 is a highlight in the beginner category. Forgiving but direct, with glide performance to spare. First the basic principles: the Axis has always been an agile beginner's glider. Swing's development team gave the Axis 5 a distinctive sporty appearance.

New ground was broken in its development and a new high-tech overall concept was achieved. The high arc technology increases performance and agility whilst keeping the same high level of stability.

The Axis 5 set standards in the beginner class, complemented by a modern canopy desian.

From the first time you fly the Axis 5, you will be back for more. The playful handling is exceptional, and the feel-good factor equally so. This combination and the impressive agility which derives from the completely new brake line attachment, make the Axis 5 a reliable companion for the future.

Pilots who choose the Axis 5 will get sportiness, dynamism and performance to spare.



Line system

The Axis 5 has A, B, C and D line levels, which fork twice from the bottom (riser) to the top (canopy) and which are divided into main, middle and top lines. The individual line levels are connected with one another using the "handshake knot" (special hoop technology).

The Maintenance and Service book has a detailed line connection plan, showing the individual levels, connections and descriptions of the lines.

With the brake lines, the individual levels are bundled at the end with the main brake line. This runs through the brake pulley attached to the riser and is knotted at the brake swivel of the control handle. There is a mark on the main brake line which allows the control handle to be correctly positioned.

The main lines are all attached to Maillon quick links. They are fed through special elastic rings and attached to prevent the lines from slipping and to ensure that they sit in the correct position.



IMPORTANT

The paraglider is delivered ex factory with the Maillon quick links secured using a strong thread-locking compound Loctite© to prevent unintentional opening. After service work, quick links which have been opened must be secured again against unintentional opening.



WARNING

The service intervals for the lines given in the Maintenance and Service book must be observed under all circumstances.

The Axis 5 has sheathed lines with diameters of less than 1mm. There is a risk of the lines breaking if there is improper use or if service intervals are not observed.

Risers

The 20mm wide risers specially developed for the Axis 5 allow the pilot to use a pulley system to adjust the speed of the Axis 5 to suit individual preference. There is more information on use of the speed system in the section "Flying the Axis 5".

Technical information and materials

The Maintenance and Service book has detailed technical information, including take-off weight, design information and speed range. It also includes extensive information about the canopy and line material used.



04 Setting up the Axis 5 and test-flying

Before the first flight



WARNING

A specialist must test-fly and inspect the paraglider before your first flight. The test-flight must be recorded on the paraglider information label.

During production, the Axis 5 goes through several quality control checks before finally undergoing an exact type certification test. Conformity with the reference specimen is checked and certified before the glider is delivered to the customer. Extreme care is taken in the manufacture of all patterns, lines and riser lengths. They show a high level of precision and should not be altered under any circumstances.



WARNING

Any changes or improper repairs to this paraglider shall render invalid the certification and warranty.

Adjusting the main brake lines

The Axis 5 is delivered ex factory with a brake adjustment marked which complies with the test sample and which should not be altered. This adjustment will allow you to steer and land the paraglider almost without delay.

The main brake lines must be checked by an expert before the test flight, and must be fastened so that the mark is visible approx. 5mm above the knot.

Factory setting

Correctly installed brake lines have about 10cm of feed. This is how far you must pull down the brakes before the trailing edge of the paraglider starts to move downwards and begins to brake. Note that the brake cascades already cause drag by their aerodynamic resistance.

Modern gliders such as the Axis 5 have less tolerance with regard to adjustment of the brake lines. It is therefore normally not necessary to alter the length.

If you do nevertheless adjust the brakes, under no circumstances should you go above or below the tolerance levels given in the Maintenance and Service book.

Incorrect adjustment

If the brake lines are too long, the paraglider reacts slowly and is difficult to land. The brake lines can be adjusted during flight by wrapping them around your hands which will improve the flight characteristics. Adjust the brake lines to the correct length after you have landed. Changes to the braking distance should always be made in small increments of no more than 2 to 3cm and must be tested on a training slope. The left and right brakes must be adjusted symmetrically.

If the brakes are shortened, care must be taken that the paraglider is not slowed down in trim and accelerated flight because of the brake lines being too short. Safety issues may arise and performance and launch behaviour may deteriorate if the brake lines are shortened too much.





WARNING

If the brake lines are too short, the following risks could arise:

- there could be an early stall
- the paraglider does not launch well and there is a risk of deep stall
- the paraglider exhibits dangerous behaviour in extreme flying
- the trailing edge of the paraglider is braked in accelerated flight which, in an extreme case, could cause a frontal collapse

Brake knots

The overhand knot and bowline knot shown below are the most suitable for connecting the brake line to the brake handle.

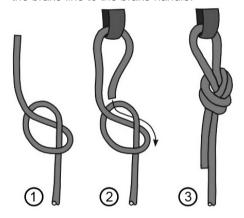


Fig. 2: Overhand knot

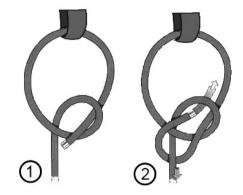




Fig. 3: Bowline knot



WARNING

Loose, unsuitable or incorrectly tied brakeline knots can cause the main brake line to loosen and then lead to loss of control of the glider.

Ensure that only overhand or bowline knots are used and that they are tied correctly.



Adjusting the brake handle

The Axis 5 is fitted with Swing's Multigrip brake handles, which allows the stiffness of the grip area to be adjusted. The various options for stiffening the brake handles allow them to be adjusted to suit the pilot's particular preferences. There are 4 levels of stiffness possible using various combinations of the stiffening options. The pilot is able to choose the appropriate degree of stiffness by simply taking out or inserting the various parts.

Fig. 4: How to insert and remove the stiffeners into Swing's Multigrip brake handle



Multigrip brake handle on delivery with both stiffeners



To remove the stiffeners, turn the Multigrip brake handle inside out and push the two small rods out through the opening



Multigrip brake handles after removing both stiffening rods. These are the various parts:

- Firm stiffening (bar)
- Soft stiffening (tube)
- Multigrip brake handle without stiffening
- Brake swivel
- 6 Main brake line

The procedure is the same to insert the stiffeners: turn the Multigrip brake handle inside out and push the two small rods into the handle again through the opening.

There is also a swivel • where the brake lines/brake handles connect to prevent the brake lines from twisting.



Speed system

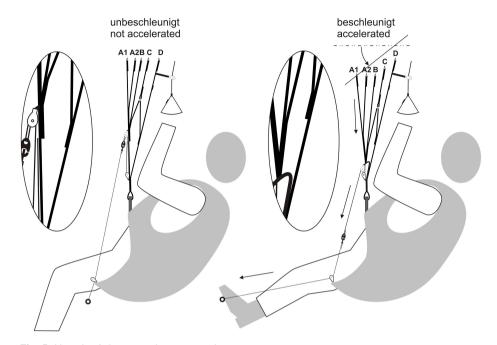


Fig. 5: How the Axis 5 speed system works

The Axis 5 already has a high basic trim speed, but this can be increased considerably by using the additional speed system. It is particularly useful if there is a strong headwind, for valley crossings or to leave a dangerous area quickly.

The A-, B- and C-risers can be shortened using the speed bar. This decreases the canopy's original angle of attack and the speed of the glider increases.

The speed system must be correctly fitted and adjusted to ensure it operates smoothly during flight. Before first launch, the length should be adjusted to suit the pilot and the speed system should be checked.

The speed bar and the riser are connected by special Brummel hooks. Adjust the length to the speed system so that your legs are fully stretched when at maximum accelerated flight (the two riser pulleys next to each other), otherwise you may experience symptoms of fatigue in long flights. You should still be in a comfortable flight position even when the speed system is used to its full extent.

You will not be able to use the paraglider's full potential if the speed system is too long.





WARNING

Do not make the speed system too short. The glider must under no circumstances be pre-accelerated as a result of the adjustment being too short.

Problems (such as collapses or tucks) have a more drastic effect with increased speed than in unaccelerated flight. It is generally strongly recommended that you do not use the speed system in turbulent areas and when flying close to the ground, because of the increased risk of collapse.

Fasten the speed bar to the harness before launch to avoid tripping over it when preparing to launch or taking off.

Harnesses

The Axis 5 can be used with any harness which has "GH" classification. There is more information about this on the licensing body websites (refer to Appendix).

Be aware when choosing a harness that the height of the attachment point affects flight behaviour. The lower the attachment point, the more agile the paraglider. The harness should also ensure that you can apply the maximum acceleration distance using the pulleys.

Be aware too that the relative braking distance can also alter with the height of the attachment point. Please contact Swing or your Swing dealer if you have any questions about using your harness with the Axis 5.

Reserve

It is a mandatory requirement to carry an approved reserve for use in emergency situations where the paraglider fails and recovery is not possible, for example after colliding with another aerial sports craft.

In choosing a reserve, you should be careful that you remain within the specified take-off weight. The reserve is fitted according to the manufacturer's instructions.

Recommended weight range

The Axis 5 must be flown within the permitted weight range, which is given in the Maintenance and Service book. The weight refers to take-off weight: pilot, incl. clothing, glider, harness and equipment. Determine your take-off weight by weighing yourself with all of your equipment and your backpack.

Swing offers the Axis 5 in various sizes. If you are choosing between two sizes, your personal flying preferences will determine which glider to choose.

If you prefer very dynamic flight behaviour with fast reactions and without hesitation, you should choose a high wing-loading, i.e. the smaller model.

The dynamics reduce in the medium and lower weight range. Flight behaviour becomes more straightforward and many pilots select this weight range because they find it easier to centre in thermals. If these features appeal to you, you should fly with less wing-loading and choose the larger model.

The Axis 5 reacts to weight changes only by slightly increasing or reducing trim speed, with little noticeable influence on glide performance. You can therefore choose the size completely according to your own flying style.



First flight

Carry out your first flights only during stable weather, and in a familiar area or on a training slope. You should steer gently and carefully to begin with so that you can become accustomed to the reactions of the glider without stress.



WARNING

Do not overestimate your own abilities. Do not allow the paraglider's classification or the behaviour of other pilots to make you careless.



05 Flying the Axis 5

The Axis 5 was developed for beginners and pilots who fly infrequently and have little/irregular flying experience. The fundamental aspects of flying described below should be familiar to these pilots or be taught to them as part of their training.

Laying out the paraglider and pre-flight check

Before launching, always check the following:

- Are there any tears in the glider or other damage?
- Are there any knots or tangles in the lines?
- Are the brake lines clear and attached firmly to the handle?
- Are the brake lines adjusted to the correct length?
- Are the quick links to the lines and risers closed and secured?
- Is the canopy dry?
- Are the risers and seams in good condition?
- Is the harness in good condition?
- Is the handle for the reserve chute secure?



TIP

A careful pre-flight check is required for any type of aircraft. Make sure that you exercise the same level of care each time carry out the check.

Place the paraglider with its upper surface against the ground and spread it out so that the leading edge is slightly curved.

Carefully sort out all the rigging lines and make sure that there are no lines underneath the canopy, tangled or caught up in any way.



WARNING

If there are obvious folds in the glider because it has been tightly packed or stored away for a long time, then the pilot should carry out some practice inflations before first launch and smooth out the trailing edge a little. This ensures that the flow profile is correct during launch. It is particularly important in low temperatures that the trailing edge is smoothed out.

5-point check

The 5-point check is carried out immediately before launch to check once again the most important safety points. It should always be carried out in the same sequence so that nothing is overlooked. The 5 points are:

- Does the weather, in particular wind direction and strength, allow a safe flight?
- Is personal equipment correct (harness, carabiners, reserve, helmet) and are all straps done up?
- 3. Is the canopy arranged in a half-moon shape and are all the air-entrances open?
- 4. Are all the lines untangled and are any lines under the canopy? Risers and Breakelines not twistet?
- 5. Are the airspace and launch area clear?



Launch

We recommend a forwards launch if there is little wind. Pull up the glider with the lines stretched. It is not necessary to use any momentum to launch the Axis 5 and/or to start running with slack lines.

While the glider is rising, guide the A-risers evenly upwards in an arc, without shortening them. Avoid pulling hard on the risers. The Axis 5 launches very easily and is easy to control. Launching is even easier if the canopy is arranged in a half-moon shape.

The Axis 5 is suitable for reverse-launching from wind speeds of 3m/s. The pilot turns around to face the glider with the updraft coming from behind. Pulling on the front lines makes the canopy start to rise above the pilot, as in a forwards launch. The pilot should turn around into the direction of flight when the canopy reaches its highest point, and can then begin to run and take off.

This method of launch makes it easier for the pilot to control the rising of the canopy and to carry out fine-tuning, so is therefore recommended in strong winds.



TIP

The pilot must work actively to keep the glider on the ground in higher wind speeds (from approx. 6 m/s), otherwise the glider may rise above the pilot unintentionally.

Level flight

When the brakes are open, the Axis 5's flight is stable and level. The brake lines can be used to adjust the speed according to the flight situation, to ensure the optimum level of performance and safety.

The best glide speed in calm air on the Axis 5 is achieved with the brakes fully open. Minimum sink is reached by pulling approx. 10 cm of brake. If the brakes are pulled more, the sink does not reduce any further, the control pressures increase noticeably and the pilot reaches minimum speed.



IMPORTANT

Flying too slowly close to stall speed increases the risk of an unintentional asymmetric or full stall. This speed range should therefore be avoided and used only on landing.

Turns

With the Axis 5, Swing has developed a glider which reacts immediately to steering input and is extremely responsive. The Axis 5 performs best in turns when it is flown with sufficient speed and weight-shifting. Too much braking increases the sink rate.

The Axis 5 has extremely low negative tendency, so it can also be turned in a tight area by carefully pulling the inside brake line

If the brakes are applied more, the bank attitude increases and the glider will fly a fast turn increasing in steepness, which will eventually become a spiral dive (further information on this is in the section "Spiral Dive").



Rapid descent methods

In many flying situations a very rapid descent is necessary to avoid a dangerous situation, e.g. the upcurrent from a cumulus cloud, an approaching cold front or a storm front.

Plan you flying generally in such a way that you do not need to rely on rapid descent methods.

Rapid descent methods should all be learned in calm conditions and at sufficient altitude so that they can then be effectively used in extreme conditions.

The rapid descents are divided into three different manoeuvres which increase the sink rate safely and in a controllable manner.

Only use rapid descent methods you have properly mastered.

Spiral dives

The spiral dive is the most effective method for making a rapid descent, and can allow sink rates of up to 20 m/s to be reached. It is suitable where there is a high ascent rate and little wind.

The certification tests differentiate between sink rates over and under 14 m/s. The Axis 5 automatically recovers from the spiral dive within one turn up to 14 m/s. Above 14 m/s, it may be necessary to break the outside half of the wing and/or weight-shift to the outside to recover from the spiral. With a sink rate up to 20 m/s, the spiral does not tighten automatically. The certification test flights are carried out with a carabiner distance (centre to centre) of 42cm.

Starting the manoeuvre

Begin the spiral dive whilst flying at full speed by flying a turn which becomes tighter and tighter and by using weightshifting to the inside (refer here to "Turns" also).

The bank angle and sink rate are controlled by carefully applying or releasing the inside brake.

Look down before and during the spiral dive to maintain a constant check on your distance from the ground.



IMPORTANT

The outer wing tip may collapse during the spiral dive although this is no cause for concern. It can be avoided by lightly braking on the outside. Release the brakes carefully.

Recovery

Recover from the spiral dive slowly and steadily over several turns. The inside brakes are gradually released. If the brakes are released too quickly, the increased speed can cause the wing to climb, become unsettled or partly collapse. Recovery can be assisted by braking lightly on the outside.



WARNING

In the spiral dive, very high turn speeds can be reached with an increase in acceleration due to gravity (up to over 6g), so exercise care when attempting this manoeuvre. Take note of the following:

- Do not continue the spiral dive for too long: it could cause a loss of consciousness.
- Always maintain ground clearance of 150 – 200m.
- Spiral dives with "big ears" lead to extreme loading of the open section of the canopy. This move is



prohibited in Germany.

B-stall

In the B-stall, a stall is provoked and the paraglider sinks vertically with a sink rate of approx. 8 m/s. The B-stall is suitable when there is an average ascent rate and little wind.

Starting the manoeuvre

Grasp both of the B-risers on the mallions at the coloured mark. Pull both B-risers evenly down until the airflow is broken and the wing goes completely into vertical descent flight mode. The B-risers should then be held in this position to ensure a gentle descent.



IMPORTANT

Pull down the B-risers only until there is no airflow. If they are pulled down any further, the glider could go into a horseshoe.

Check before and during the B-stall that the airspace beneath you is clear.

Recovery

Return the B-risers quickly and evenly into their normal position. The glider may go into a deep stall if they are released too slowly or into a negative spin if not released symmetrically. If this happens, the speed must be increased using the speed system or by pulling the A-risers forward.



WARNING

The canopy speeds up after the Brisers have been released until the airflow returns. Under no circumstances should the brakes be applied at this time.

This manoeuvre should be avoided at low temperatures. Pilots should be aware that this considerably increases the tendency to deep stall.

Big Ears

Big ears is the simplest method for rapid descent and has a sink rate of 3-5m/s. The advantage of big ears is that the glider continues to fly straight, meaning that a danger area can be avoided. It is even possible to land using big ears, for example on a top-landing to compensate for the updraft.

The wing-loading increases by the reduction in the wing's surface area, the wing becomes more stable against collapses in turbulence. Nevertheless, the air resistance of the wing also increases, and it flies more slowly and closer to the stall limit. To counter this and to increase the effectiveness of the sink, the speed bar is generally also used in combination with big ears.

Starting the manoeuvre

Start the manoeuvre by pulling both outer Alines downwards. The brake lines are held steady and the pilot uses weight-shifting to steer the paraglider. You can now descend safely on the stable middle part of the wing. The brakes must not be shortened during the manoeuvre, e.g. by wrapping the brake lines.



Recovery

Let go of both A-risers smoothly. Assist the opening process by pumping the brakes if the ears do not open automatically.



WARNING

The technique of big ears causes a higher load for the line groups which are still weight-bearing. Therefore, do not fly any extreme manoeuvres with big ears.

This manoeuvre should be avoided in low temperatures. Pilots should be aware that this increases the tendency to deep stall.

Landing

There are no specific characteristics to observe during landing. Prepare for landing by making a straight approach flight into the wind and allow the glider to decelerate at trim speed. At 1m above the ground, the brake lines are pulled down as far as they will go, so that the paraglider has been fully braked just before the ground is reached.

The brakes should be applied in a more regulated manner if there is a strong headwind. Landing out of a steep turn or a rapid change of direction before landing should be avoided because of the pendulum effect caused.



WARNING

Always fly with sufficient speed when you are near the ground (well above stall speed) to avoid an unintentional stall.



06 Types of use

The Axis 5 was developed and tested for use solely as a paraglider for foot launch and winch launch. Any use other than as intended is prohibited.

Winch launch

The procedure for a winch launch is similar in its initial stages to a forwards launch. After the canopy has been pulled up to its highest point, the pilot rises from the ground by the tension of the tow line. Under no circumstances should the "start" command be given before the glider is completely under control. Major changes to direction should be avoided during the launch phase and before reaching a safe altitude. After having left the ground, the pilot will be slowly towed in a flat angle up to the safe altitude of 50m. During this phase, the pilot must remain ready to run and must not sit back in the harness, so that it is possible to land safely in the event that the winch or tow rope fails. Ensure that the glider is flown with open brakes so that the angle of attack is not increased further by the brakes.

On a winch launch, the glider should if possible be steered only by weight-shifting. Brisk, forceful steering input with the brakes can be used to help correct direction, without braking the glider too much and stalling it.

If a webbing release system is used, there is an increased risk of lockout, which can be detected by the fact that the apparatus does not fly towards the winch and control pressure by the pilot is not sufficient to correct this. You should therefore check regularly the position and alignment of the glider to the pilot during towing.



WARNING

The most common cause of stall on winch is releasing the A-risers too early while the glider is rising. The pilot should ensure that the canopy is above him before the "start" command is given.

 
Any changes to direction using the brakes should not be carried out until the canopy is already above the pilot, as too much brake can cause the glider to fall down again or be towed in a nonflyable condition.

Winch-towing requires special training and special regulations must be observed. These are:

- The pilot must have completed the appropriate training and hold a licence.
- The winch and release must have a certificate of compliance which covers the towing of paragliders.
- The winch operator must have undertaken training which includes the towing of paragliders.
- The Axis 5 may not be towed with a towline tension of more than 90 daN.
- The paraglider must not under any circumstances be towed by motor vehicle or motor boat etc if you do not have the appropriate towing equipment and a suitable winch operator.

Attaching the towline release system

The optimal attachment point for the towline release should be as close as possible to the system's centre of gravity. On a paraglider the ideal attachment point is level with the harness attachment point or directly on the risers.



It is not essential to use a suitable tow adaptor, but it is recommended and provides the pilot with greater safety during the towing phase.

Swing offers the option of the adjustable tow adaptor "Pro-Tow", which facilitates the tow procedure during launch and pre-accelerates the canopy during this stage by about 2cm.

When using spreader tubes, the distance between the system / shackle must be lengthened accordingly (cord or webbing) and the system must be secured using a bungee to stop it from hitting the pilot in the event of a towline failure.

The distance between the risers must not be reduced by using the towline release system (risk of twist).



IMPORTANT

If you are using a front-mounted reserve system, it is important to ensure before first launch that it can be deployed without any obstruction. If this is not the case, then only a webbing release system should be used.

Motorised flight

This is regulated in Germany by the DULV (German Ultralight Association). If you wish to fly the Axis 5 with a motor, then please contact Swing, the manufacturer of the engine unit and the DULV (or the governing body in your area). The addresses are in the Appendix.

Tandem paragliding

The Axis 5 does not have certification for use in tandem paragliding.

Aerobatics

In Germany, it is prohibited to perform aerobatics using a paraglider, which under German law is included under the term "aerial sports equipment" - *Luftsportgerät*. Aerobatics is defined as flight manoeuvres at an angle greater than 135° along the longitudinal (roll) axis or lateral (pitch) axis.

The Axis 5 was not developed or tested for aerobatic use.



WARNING

Any type of acrobatic manoeuvre at all on the Axis 5 is contrary to law and illegal. The pilot would be putting his/her life at risk. Acrobatics involves a risk of unpredictable flight attitudes, which could lead to damage to material and structural failure.



07 Dangerous situations and extreme flying

Dangerous situations

Pilot error, extreme wind conditions or turbulence which goes unnoticed by the pilot for too long may leave the wing in an unusual flying position, requiring special reaction and skills on the part of the pilot. The best way to learn how to react calmly and correctly in a serious situation is to attend safety training, where you will learn how to manage extreme situations under the guidance of a professional.

Ground-training is another safe and effective method of familiarising yourself with your glider's reactions. Launch can be practised, as can small flying manoeuvres, such as stall, asymmetric collapse, front stall etc.

Any pilot who flies in turbulent conditions or who makes an error in handling the glider is at risk of getting into an extreme situation. All of the extreme flight figures and flight attitudes described here are dangerous if they are carried out with inadequate knowledge, without the right safety altitude or without training.



IMPORTANT

These instructions are not a substitute for the need for safety training. We therefore recommend that you take part in special safety training which will teach you how to handle extreme situations.



WARNING

Always keep within the recommended limits. Avoid aerobatics and extreme loading such as spirals and big ears. This will prevent accidents and avoid over-loading the glider.

In turbulent conditions, always keep enough distance from rock faces and other obstacles. Time and sufficient altitude are needed to recover from extreme situations.

Deploy your reserve if the corrective manoeuvres described in the following sections do not return the glider to a controllable flying position or if there is not enough altitude for correction.

Collapsing the paraglider

Asymmetric collapse

Asymmetric collapses are caused by the stagnation point moving to the trailing edge of the glider. A negative angle of attack makes part of the canopy collapse and tuck under, and the glider may plunge down, turn away or spin.

Recovery

Should an asymmetric collapse occur, counter-brake slightly on the side of the glider that is still inflated to stop it turning away and to stabilise it, until the glider flies straight ahead again. With large asymmetric collapses, it is important to counter-steer carefully so that the glider does not stall completely and go into a full stall.

The part of the glider which has collapsed generally re-inflates automatically but this can be assisted by applying light brake pressure on the collapsed side (but not hectic "pumping") while counter-steering on



the opposite side. Make use of the full braking distance.

Following a very large collapse of more than 70%, the wing-tip of the collapsed side may become trapped in the glider lines. Here too counter-braking and weight-shifting must be used to stop the glider from turning away. The trapped end can generally be opened by a short, fast pull on the brake lines or by pulling on the separate stabilo lines.



WARNING

Counter-steering too strongly on the inflated side of the glider can result in a stall and to further uncontrolled flight manoeuvres (cascade of events).

Front stall

A negative angle of attack can also cause part or all of the leading edge of the glider to collapse.

Recovery

The Axis 5 will normally recover quickly and automatically from a front stall, but reinflation can be assisted by light symmetrical brake input. In the case of extreme front stalls across the entire wing chord, the wing tips may move forward making the glider form a U-shape. Again, recovery is by light symmetrical braking on both sides, but care must be taken that both wing ends return to normal flight evenly.

Types of stall

When a paraglider flies through the air, a laminar and turbulent boundary layer is created. Extremely dangerous flight configurations can result if the laminar boundary layer is interrupted, with

practically the entire airflow along the top surface braking away. This happens in particular when the angle of attack is too great.

There are three different types of stall in paragliding.



IMPORTANT

Full stall and spin are manoeuvres which can be fatal if recovery is not correct. These manoeuvres should therefore be avoided. However, it is important to learn how to recognise the indications that a glider is about to stall so that you can take immediate action to prevent it.

Deep stall

Paragliders can go into a deep stall for a variety of reasons: brake lines too short (no slack), old or damaged glider material which therefore has increased level of permeability, altered trim/line length and changes to profile characteristics caused by moisture (e.g. flying in rain). Paragliders have a particular tendency to stall if the wing-loading is too low.

In a deep stall, the airflow from the front reduces and the glider goes into a stable flight attitude without forward momentum. The paraglider sinks almost vertically at 4-5m/s and there is noticeably less flight noise.

Recovery

Remain in an upright position and push the A- and B-risers in the direction you are flying, so as to shorten them by 5-10cm. If you have a speed system, you can also use it to accelerate, so that the glider goes



into a normal flying position from the deep stall.

After you have landed, the glider and the length of the lines must be checked.

Full stall

The full stall happens when the wing partially deflates and loses its arched shape. It is triggered when the maximum possible angle of attack is exceeded. The most common cause is going below the minimum speed or flying near the minimum speed combined with the effects of turbulence.

In full stall, the paraglider loses its forwards travel, surges backwards and deflates. If the brakes are held down, the canopy comes up over the pilot again. The result is an almost vertical descent with a sink rate of approx. 8m/s.

Recovery

Fully release the brakes within 3 seconds (count 21, 22, 23). If the brakes are released too slowly, the paraglider may spin. The spin stops automatically when the brakes are released completely.



WARNING

If the canopy has gone back during the full stall, the brakes must be held down, otherwise the canopy may surge forward and, in an extreme case, end up underneath the pilot. Hold the brakes down until the canopy is above you again.

Spin

The spin is a stable flight attitude, in which one side of the canopy stalls, while the other

side continues to fly forward. The glider turns around the stalled side of the wing.

Recovery

To recover from the spin, the pilot must quickly release the brakes. The stalled side of the wing will then speed up again. Depending on recovery and the dynamic of the circular motion, one side of the canopy may shoot forwards and suffer an asymmetric collapse. If the pilot suspects that the glider has unintentionally been put into a spin, the brake which has been pulled down too far must be released immediately.



IMPORTANT

If the spin does not stop, check whether you have released the brakes fully!

Emergency steering

If for some reason the brake lines are not working, e.g. if the knot on the brake handle has come undone or a brake line is defective, the Axis 5 can also be steered and landed using the rear risers.

In this case, stall happens more quickly and the pilot must compensate for the changed flight behaviour by pulling carefully on the risers

Other tips for dangerous situations

Stalling in rain

In general, there are two reasons why a paraglider may go into deep stall in rain:

1. The first risk lies in the fact that the canopy weight increases if a glider is flown



in rain for any length of time. The centre of gravity and angle of attack then shift, which can result in airflow separation/stall. It is relevant here that if a glider absorbs more water (as older gliders do because they lose their water-repellent coating over time) and is closer to the deep stall limit because of its design and age, less water absorption and thus weight increase will put the glider into deep stall.

2. When there is rain, there can be so many water droplets on the top surface of a glider that almost the entire upper surface is affected but, even so, the drops "bead" so the surface is not wet through. This makes the top surface so "rough" in texture from the drop formation that the airflow over the top of the wing separates from the surface. This phenomenon has been known for some time from hang-gliding and gliding. With new gliders, the droplets are absorbed less quickly by the fabric. Thus, the newer a glider is, the greater the number of droplets caught on the top surface and the bigger those droplets are, the greater the risk that there could be airflow separation. We were able to recreate these conditions by practical tests and computer simulations, but they occur very rarely.

It is the case in both of the above situations that the control travel and braking distance first reduce and then the deep stall is caused, mostly by alteration of the brake travel or angle of attack, e.g. by a gust or thermal



WARNING

Flying in extremely humid weather or in rain is outside of the operating limits of the glider. If you are not able to avoid flying in rain, please observe the

followina:

- it is advisable to fly with slight acceleration during and after the rain (min. 30% or more)
- use no brake input or as little as possible
- do not use big ears
- control travel reduces
- avoid tight turns, especially in the final approach. If conditions allow. vou should also fly slightly accelerated in this phase
- avoid large angles of attack and the possible early stall near the ground (release the speed bar only slowly)

Advertising and adhesives

Always make sure before attaching advertising to the glider that the adhesive planned will not alter the glider's flight behaviour. If you are in doubt, we recommend that you do not attach the adhesive.



IMPORTANT

Attaching adhesives to the glider which are large, heavy, or made of unsuitable material may result in revocation of the certification.

Overloading

The glider structure is put under high levels of strain in particular on extreme flight manoeuvres, rapid descent methods (spiral dives) or prohibited aerobatic manoeuvres. They considerably accelerate the aging process of the structure and should therefore be avoided.



The glider must be inspected earlier than is usually the case if it has been put under more than the usual degree of strain.

Sand and salt air

In many cases, sand and salt air cause the lines and fabric to age much more rapidly. If you often fly near the sea, the glider should be inspected more frequently than normally required.

Temperature range

Temperatures under -10 ℃ and over +50℃ can make the paraglider unfit to fly. The manufacturer's warranty will lapse if the glider is used outside of this temperature range.



08 Storing and looking after the paraglider

Storing the paraglider

Packing the paraglider


Fold up the Axis 5 as shown in steps 1- 4. The leading edge reinforcements (Mylar and Rigid-System) on the front edge are placed on top of each other to avoid bending or misshaping them. This method of packing ensures that the leading edge is treated carefully, which will increase the glider's life, performance and launch behaviour.


If the reinforcements have been bent or misshapen, they distort more easily during flight, creating an altered air inflow which can lead to a loss in performance and changes in flight behaviour.

The leading edge reinforcements also perform an important function on launch. Therefore, the less they have been bent, the more easily the glider will inflate and launch.

Fig 6: Steps 1 - 4 show the correct and careful way in which to fold up the Axis 5



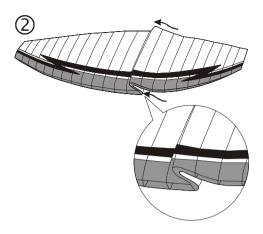

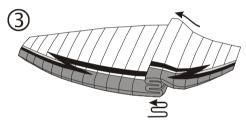

Vary slightly the final step of packing up ④, so that it is not always the middle cell which is bent. Use the neighbouring cells as well from time to time to increase the life of the fabric, particularly in the middle part.



When you are completing the final part of packing, we recommend that you put the internal protection bag under the glider to minimise abrasion on the ground.



Storing and transporting the glider

Even if your paraglider was completely dry when it was packed up after the final flight of the season, for long-term storage you should if possible take it out of the back pack and spread out the canopy a little in a clean, dry place away from direct light. If you do not have the space to do this, then open the backpack, internal bag and belt as much as possible and avoid compressing it. It must be stored at a temperature between 10° and 25°C and in relative humidity between 50 and 75%. Make sure too that the paraglider is not stored in a place where animals such as mice or cats could use it as a place to sleep.

Do not store the paraglider near any chemicals. Petrol, for example, causes the material to disintegrate and can cause considerable damage to your paraglider. When your equipment is in the car boot, keep it as far away as possible from any spare petrol cans or oil containers.

The Axis 5 should not be exposed to extreme heat (e.g. in the boot of the car during summer). The heat may cause any moisture present to be pressed through the fabric, thereby damaging the coating. High temperatures accelerate the process of hydrolysis, particularly when combined with moisture, which damages fibres and coating. Do not store your paraglider near radiators or other heat sources.

Always transport your glider in the special inner bag and use the backpack provided for the rest of the equipment.

Looking after the paraglider

Fabric

Swing uses a specially developed polyamide fabric for the Axis 5 which has a high-quality coating for improved UV

resistance, colour fastness and air permeability. This fabric undergoes rigorous laboratory tests and was tested for several months under extreme conditions and heavy use in flight.

Care is essential to ensure that the fabric and glider remain durable and retain their qualities. The glider should therefore be protected from unnecessary UV light. Do not unpack your glider until immediately before flight and pack it up straight after landing. Modern paraglider fabrics have better protection against the sun, but UV rays in particular are still one of the decisive factors in how the fabric ages. The colours will fade first and then the coating and fibres will begin to age.

When the Axis 5 is manufactured, the side of the fabric with the coating is kept to the inside. This provides relatively good protection from damage for the coating which is of key importance to the fabric's features. When choosing a place to launch, try to find somewhere which is smooth and free of stones and sharp objects.

Do not stand on the glider. This weakens the fabric, especially if it is on a hard or stony surface. Pay attention to the behaviour of spectators at the launch site, especially children: do not hesitate to draw their attention to the sensitive nature of the fabric.

When you are packing up your glider, make sure that there are no insects trapped inside. Many insects produce acids when they decompose, which can cause holes in the fabric. Grasshoppers make holes by biting through the fabric and also excrete a dark liquid which stains. Keep animals away when you are packing up. Insects are not attracted by any particular colours, contrary to what is commonly believed.

If the glider gets wet or damp, it should be dried as soon as possible in a well-ventilated room (but out of the sun). It may



take several days before the canopy has dried completely because the fibres absorb water. Mould may form if the paraglider is stored wet and the fibres may rot, particularly when it is warm. This can make the paraglider unsuitable for flying within a short time.

A brand-new glider will often be compressed when delivered. This is solely for the initial delivery and the glider should not be compressed in such a way again. Do not pack your glider too tightly after use and, even though it is very comfortable, never sit on the backpack with the glider inside.

If salt water gets on the glider, it should be rinsed immediately in fresh water (refer to the section "Cleaning").

Lines

The Axis 5 has various different high-quality and accurately manufactured lines which have been selected according to the load and area of use. You should also protect the lines from unnecessary UV light because, as with the fabric, UV light in particular will weaken the lines.

Dyneema lines, which are used in the area of the main brake lines, for example, are very temperature-sensitive and can be permanently damaged at temperatures above 75°C. Therefore your glider should never be stored in a hot car especially during summer.

Be careful that there is no abrasion caused to the coating on the lines by rubbing, particularly when ground-training with crossed risers.

Do not walk on the lines after the glider has been spread out and watch out for spectators or skiers who may inadvertently go over the lines.

When you are packing up the glider, be careful to avoid putting any unnecessary

kinks in the lines and use only the overhand knot or bowline knots described for the brake lines.

Cleaning

If you do have to clean the glider, use only lukewarm fresh water and a soft sponge. Use a weak soap solution for stubborn stains, and then rinse it out carefully and thoroughly. Leave the glider to dry in a place which is well-ventilated and in the shade.



IMPORTANT

Do not under any circumstances use chemicals, brushes, rough cloths, high-pressure cleaners or steamers to clean the glider, as these can damage the fabric coating and weaken it. The glider becomes porous and loses braking strength.

Do not under any circumstances put the glider in the washing machine. Even if washing powder is not used, the glider would be badly damaged by the mechanical action of the machine. Do not put the canopy into a swimming pool - chlorine will damage the fabric. If you have no choice but to rinse the glider, e.g. following a landing in the sea, gently wash it down inside and out with fresh water. Frequent rinsing accelerates the aging process.



09 Repairs, Inspections and Warranty

Type designation

Swing paragliders have an exact identification on the underside of the stabilo lines or on the centre rib, which is obligatory for all paragliders. The information required is set out in the airworthiness requirements.

It is helpful to provide the type designation of the paraglider if you are contacting your Swing dealer with any queries or ordering replacement parts or accessories, to ensure accurate identification.

Repairs

Swing workshops

All repairs and servicing should be carried out by a Swing-authorised workshop or directly by Swing. Swing workshops have trained staff, original Swing parts and the necessary know-how, all of which will ensure top quality.

Small repairs to the glider

You can repair small tears in the wing yourself using self-adhesive sail material, provided that the tears are in places which do not bear heavy loads, are not at the seams and are no bigger than 3cm.

Replacement lines for the Axis 5 can be ordered direct from us online at:

 $www.swing.de \rightarrow Service \rightarrow Line \ service$

Regular inspections

The following parts and materials must be inspected regularly for damage, abrasion and correct operation, e.g. after landing:

- Risers and quick-links
- Lines
- Fabric

Lines

Measuring the length of the lines is part of the regular paraglider inspection. The lines must be measured with a load of 5kg, in order to ensure reproducible results for a comparison with the lengths in the check sheets. The line lengths for the Axis 5 are listed in the Maintenance and Service book.

The lines have a considerable influence on flight behaviour. Correct line length and symmetry are also important for performance and handling. Swing therefore recommends an inspection every 50 to 100 hours or once a year.

 
Lines age and lose strength even if the paraglider is used infrequently or not at all. This can affect the safety and function of your paraglider. Signs of wear are slight bumps or changes in flying characteristics. The lines must then be replaced immediately. Use only inspected and approved lines, which can be obtained through Swing.



IMPORTANT

A damaged line can result in loss of control of the glider. Always replace lines which are damaged.

If you need to replace damaged or worn-out parts, use only original parts or approved parts from the manufacturer.





WARNING

Do not under any circumstances use knots to shorten the lines. Any knot will weaken the line considerably and may cause the line to break in case of high load.

The overhand knot and bowline knots described are permitted only for connecting the main brake lines/brake handle.

Inspection

General

Swing's service programme as set out in the Maintenance and Service book should be followed so that the same high level of flight safety, operational safety and reliability is ensured for your glider in the future as well.



IMPORTANT

Read the Maintenance and Service book and follow the terms therein to ensure the validity of Swing's warranty, the glider's certification and insurance cover.

Failure to observe the inspection periods shall render invalid the certification and warranty. A properly completed logbook with details of all flying and training will help you to comply with these periods.

There is additional information on inspections in two separate booklets, both of which form part of this Manual:

- 1. Inspection information (required only in Germany and Austria), and
- 2. Maintenance and Service book (one booklet for each size and model).

These can be downloaded from our website at:

www.swing.de → Products → Axis 5

Inspection periods

In Germany, Swing gliders must be inspected as follows (check the situation in your country):

- A) Gliders used by schools and tandem gliders (if used commercially) must be inspected (the same as the 2-yearly check) every 12 months from the purchase date.
- B) Gliders for personal use and tandem gliders (not used commercially) must be inspected every two years from the purchase date.
- C) The glider must be inspected after 150 hours of use (including ground handling) if this occurs prior to the period given in A) and B) above.

Ground handling time must be at least doubled when calculating the total hours of use because of the increased wear and tear on the glider.

Validity of inspection

It is very important that your glider is serviced at the required intervals throughout its entire life. In order to benefit from Swing's warranty:

- you must have your paraglider inspected by Swing or an inspection agent authorised by Swing
- the documentation and the result of the inspection must be clearly identifiable (date and place / name of the inspector) and be entered near the glider information/certification sticker.



Inspection by the pilot

Under § 14 para. 5 of the German Aeronautical Products Investigation Order (LuftGerPV), pilots in Germany are able to carry out the inspections themselves or appoint a third party to do so (e.g. manufacturer/importer), provided that the requirements are all fulfilled. However, if this is done, the liability and warranty of Swing Flugsportgeräte GmbH will lapse.

The DHV recommends that inspection is carried out by the manufacturer/importer or by an inspection agent authorised by it and approved by the DHV.

or other Swing product must be sent to Swing Flugsportgeräte GmbH for inspection.

Swing generally includes all email addresses provided in warranty cards in its distribution list. If you only wish to register for the warranty and do not wish to receive any further safety and information email messages, please do not give your email address on the warranty card.

Warranty

Swing's warranty is a comprehensive service package, which fulfils high standards for customer service and customer care. The terms of the warranty are in the enclosed warranty card. You must register your paraglider or other Swing product in order to be able to rely on the warranty. You are able to complete the warranty card and post it to Swing or register quickly and easily online. Go to the Swing website:

www.swing.de \rightarrow Service \rightarrow Online warranty

Complete the registration within 14 days after purchasing the paraglider. If this is done online, you will receive a confirmation email. If you do not have an email address, enter 'info@swing.de' in the mandatory field. Registrations by post or without a personal email address will be recorded by Swing but will not receive confirmation. We therefore recommend that you register online with an email address.

The manufacturer must be notified immediately of any defects in the product, variations or changes in flight behaviour and any warranty claims. If necessary, the glider



10 Swing on the World Wide Web

Swing website

Swing has a comprehensive website, which provides additional information about the Axis 5 and many other issues related to paragliding. Swing's website is the first port of call for Swing's worldwide following:

www.swing.de

On Swing's website, you will find an extensive range of accessories for your paraglider, useful products for pilots, as well as additional information and accessories for your Axis 5.

You will also find links there to other services and websites:

- Product registration
- Swing's Online Shop
- Facebook, Twitter & youtube

These websites and their content are provided for your use. The content of Swing's websites has been made available for your use on an "as is" and "as available" basis. Swing reserves the right to alter the websites at any time or to block access to them.

Product registration

Registration of Swing paragliders is easy and gives you many advantages. In addition to important safety notices, you will receive advance information about, e.g. new products, upgrades, events and special offers.

Registration is a prerequisite for a valid warranty (refer here also to the section "Warranty"). In addition, Swing sends any safety notices and information for the

registered product immediately to the email address submitted. Your email address will not be provided to any third parties.

Swing-Online Shop



At Swing's Online Shop you are able to obtain directly from Swing the

full range of paraglider accessories, clothing and accessories and reserves. It is easy to place an online order and payment is made by money transfer or Paypal.

Facebook, Twitter & youtube



Swing is very active with the new media of Facebook. Twitter and

youtube and has various websites which are updated daily on various topics related to aviation and Swing products.

Paragliding

www.facebook.com/pages/Swing.Paragliders http://twitter.com/swingparaglider

Speedgliding

www.facebook.com/SwingSpeedflyingTeam http://twitter.com/SSTSpitfire

Swing TV



On Swing TV, Swing puts official video footage and footage by pilots, under these categories:

- Paragliding
- Speedflying
- Accessories
- Video footage by pilots

www.youtube.com/user/SwingParagliders#p/a/u/0/1 T7QrzaEtU



10 Appendix

Addresses

Swing Flugsportgeräte GmbH

An der Leiten 4

82290 Landsberied

Germany

Tel.: +49 (0) 8141 3277 - 888 Fax: +49 (0) 8141 3277 - 870

Email: info@swing.de

www.swing.de

Paraglider recycling

Swing Flugsportgeräte GmbH

- Recycling Service -An der Leiten 4 82290 Landsberied

Germany

DHV

Miesbacher Str. 2

Postfach 88 83701 Gmund am Tegernsee Germany

Tel.: +49 (0) 8022 9675 - 0 Fax: +49 (0) 8022 9675 - 99

Email: dhv@dhv.de

www.dhv.de

EAPR

European Academy of Parachute Rigging

Marktstr. 11

87730 Bad Grönenbach

Germany

Tel: +49 (0) 8334 - 534470 Fax: +49 (0) 8334 - 534469 Email: info@para-academy.eu

www.para-academy.eu

DULV

Mühlweg 9

71577 Großerlach-Morbach

Germany

Tel.: +49 (0) 7192 93014 - 0

Email: info@dulv.de

www.dulv.de

Versions

Version 1.0

Date: 23.05.2011

First version of the Instruction Manual



Notes		



Swing Flugsportgeräte GmbH

An der Leiten 4 82290 Landsberied Germany